

## **DiCE Testing using the Diagnostic Application**

Initial testing of the DICE tool should always be performed through the VIDA application as explained in the DiCE Installation Instructions.

When VIDA is installed, an application that supports DiCE tool diagnostics is installed automatically. Through this application, additional DiCE diagnostic tests can be performed,

Secondly, the warranty in service date can also be seen. Warranty for the DiCE unit is 2 years from the date it was first installed.



- Power the DiCE tool same as is illustrated above.
- Plug in the DiCE tool to your client via USB or Bluetooth.
- Click on the computer's Start Menu / All Programs / DiCE / DiCE Diagnostics.
- Select the appropriate DiCE serial number from the drop down menu.
- Click the "Connect" radio button.
- Click radio buttons to the right to perform the desired tests.
- Note During the Interface Test a secondary pop up window may appear.

Tools Help		
onnection	Version Info	
Select Device DiCE-201370	PassThru Version 04.04 Hardware Version 1.4.3	
	DLL Version 5.0.0 Firmware Version 5.0.0-Apr 26 2007 13:30:26	
Connected Device	Warranty Date 2007-10-29	
DiCE-201370		
	Built In Tests	
Connect	LED Test Starting LED test	~
	LED:s shall now be off	
Disconnect	Memory Test LED:s shall now be off again LED:s shall now be blinking normally again	
	Interface Test	
upply Voltage	Communication Test	
apply volidge		
15.68 V	Clear	V